





Installation Instructions

- 1. Remove the drive belt by rolling the belt off the secondary clutch.
- 2. Remove the bolt that is holding the clutch to the shaft and slide the clutch off the shaft. You may need to use penetrating oil and a clutch puller.
- 3. Using 90 degree pliers remove the snap ring from the clutch. Save the snap ring for reinstallation.
- 4. Remove the spring cup holder by lightly tapping with a hammer.
- 5. Install the new power spring and spring cup holder.
- 6. Using the supplied PVC cap compress the spring and spring cup holder. This can be done in a press or a clamping device.
- 7. Reinstall the snap ring using the 90 degree pliers while spring is compressed. *NOTE* Make sure the snap ring is properly seated.
- 8. Reassemble driven clutch. Make sure key is in place. Install the bolt and securely tighten.
- 9. Reinstall drive belt.

Indemnification And Insurance Agreement

High Performance Enhancement Kit purchaser assumes sole and entire responsibility for, and shall indemnify and save harmless Nivel LLC, from any and all claim, liability, responsibility, and persons or property that may be sustained in connection with the use of any product before or after purchase, including but not limited to high performance enhancement lift kits. The High Performance Enhancement Kit purchaser also shall indemnify Nivel LLC harmless with respect to any and all liability that may be incurred.

liability that may be incurred.

Golf Cars can be especially hazardous to operate. Always remember that riding and alcohol/drugs don't mix. Never ride on public roads. Never carry more than two passengers (except shuttles and trams). Never engage in stunt driving. Avoid excessive speeds and be particularly careful on difficult terrain. Nivel LLC reserves the right, of any time, to discontinue or change specifications, prices, designs, features, models, or equipment without notice and without incurring any obligation.



