



# E-Z-GO TXT/ST Sport Windshield Installation Instructions Part# 28033

## Hardware Kit


- 1-Windshield & Frame
- 2- 5/16 x 2 1/2 bolts
- 2- 5/16 x 2 bolts
- 8- 5/16 flat washers
- 2- 1/2 spacers
- 2- 3/4 spacers
- 1'-Rubber Trim

 *Always wear appropriate eye protection!*




## Installation Instructions:

1. If you have a roof on your cart, remove roof from the cart. When installing the sport windshield you can re-use your stock roof mount hardware or replace it with the supplied hardware. Carts without tops will require complete use of supplied hardware kit.
2. Included is a 1' piece of rubber trim for added windshield stability. Install the rubber trim to the center of the windshield before mounting the windshield on the cart. Figure 3 shows the rubber trim installed on the finished product.
3. With the stock hardware or supplied 5/16 x 2 1/2 bolts, washers & 3/4" spacers, loosely install the windshield frame to the top roof support holes on both sides of the cart as shown in Figures 1 & 2. For carts with brush guards, install the mounting brackets behind the brush guard mounts.
4. Using the stock hardware or supplied 5/16 x 2 bolts, washers and 1/2" spacers, loosely mount the windshield frame to the bottom stock roof support holes on both sides of the cart as shown in Figures 1 & 2.
5. Securely tighten all bolts.

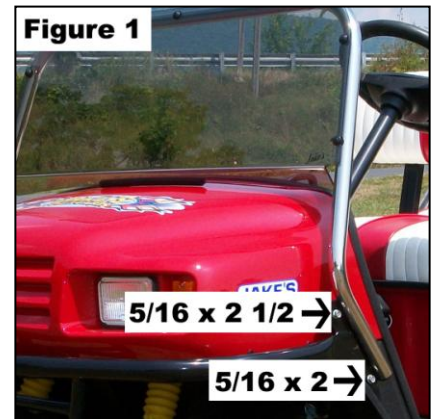

**Figure 1**

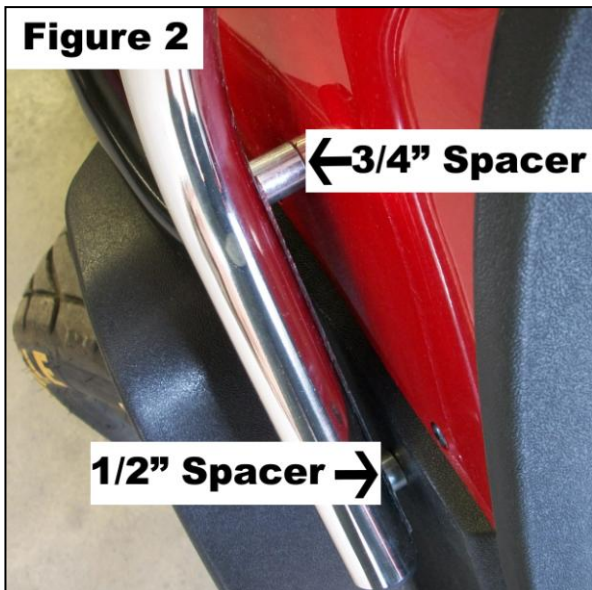

**Figure 2**



**Figure 3**

**Rubber Trim**