




**ACC-0077**

## Club Car Precedent

### Floor Mount Horn Kit\*

**Kit Contents:**

- a. (1) Horn
- b. (1) Horn Decal
- c. (1) Horn Button
- d. (2) Butt Connectors
- e. (4) Mounting Rivets

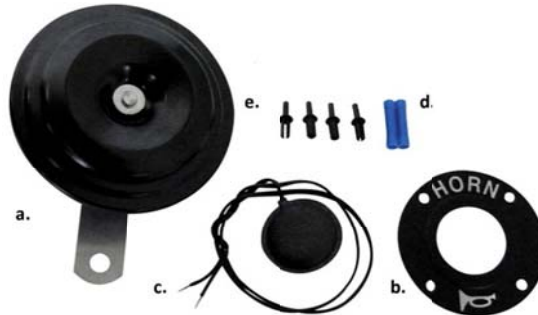

\*ACC-0077 horn kit is for use with all LGT-306E, LGT-306E8, LGT-306E12, and LGT-306GA light kits

\*ACC-0077 is for use with 12 volt systems. Operating the ACC-0077 at any voltage higher than 12 volts may damage or destroy your horn kit and void any warranty.

**Step 1:** Disconnect any and all voltage sources and battery connections before starting the horn kit installation.

**Step 2:** Locate a convenient location to mount your Precedent floor mount horn button. Be sure there are no clearance issues with the brake pedal, cup holder, and side trim. At the top of your chosen location drill a 1/8" through the floor mat only. **Do not drill through the under body.**



**Step 3:** Thread the horn button's wire lead through the 1/8" hole. Reach behind the floor mat and pull the wire lead under the mat up to the dash area.



**Step 4:** Place the horn button decal over the horn button. Be sure that the horn button is centered. Mark the four mounting holes using a punch or a marker. Remove the decal and horn button, then drill the 4 marked mounting holes using a 3/16 drill bit. Drill through the floor mat and under body.






**Step 5:** Thread the horn button wire through the 1/8" hole in the floor mat. Run the wire under the mat up to the dash area. Place the horn decal over the horn button. Center the horn button. Then mount the horn decal using the pre-drilled 3/16" holes and included rivets.




**Step 6\*:** Remove the dash panel and locate the headlight wire harness. This harness connects to the main vehicle wire harness and will have a 9 pin (gas cart) or 12 pin (electric cart) connector on one end.

Locate the red and yellow wires that are part of this harness and running to the three pin connector. Cut the red and yellow wires and discard the three pin connector.

**\*If you have bullet connectors on the red and white wires (versus a three pin plug), skip step 6.**

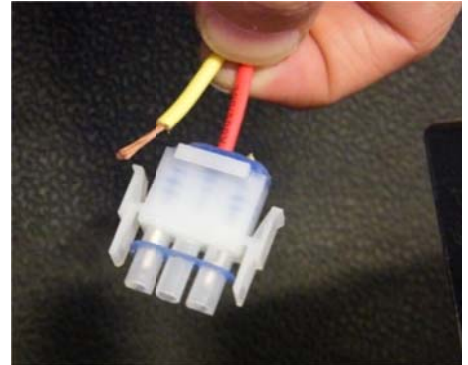

**Step 7:** Connect the yellow and red wires from the headlight harness to the black wire from the horn button using the included butt connectors. If your headlight harness has bullet connectors on the red and yellow wires, use the included bullet connectors.

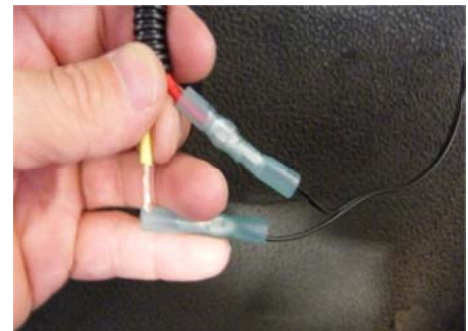

**Step 8:** Connect the black and yellow/orange wires from the headlight bar harness to the horn. Be certain the wires are connected securely.



**Step 9:** Mount the horn in a convenient location under the front body of the vehicle.

**Step 10:** Reinstall the headlight harness in the dash tucking the horn button wire under the floor mat and behind the dash panel. Make sure all wires are secure and reinstall the dash panel. Reconnect the battery/batteries and all power sources. Installation is complete.

