



TRAILER HITCH

INSTALLATION INSTRUCTIONS

MJTH8000

INCLUDED:

- Trailer Hitch
- 4 - 8x40mm hex bolt
- 4 - 10x20mm flatwasher
- 4 - 8x25mm hexbolt
- 4 - 8x15mm flatwasher

TOOLS NEEDED:

- 13mm socket




Using 8x25mm hardware provided, attach brackets to hitch using the inside holes. Bracket should face each other as shown.

If installing this product with a safety grab bar, skip to Step 3.



Using 8x40mm hardware, attach trailer hitch to footrest as shown.

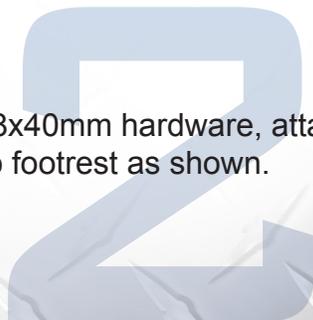

3

If installing this product with a Madjax Safety Grab bar, you will not use the mounting brackets from Step 1. Attach hitch to grab bar using 4 bolts as shown. Hand tighten bolts until all 4 bolts are in place, then tighten completely.




4

Attach grab bar and trailer hitch to footplate as shown, and tighten.

5

Attach receiver with pin clip to complete installation.

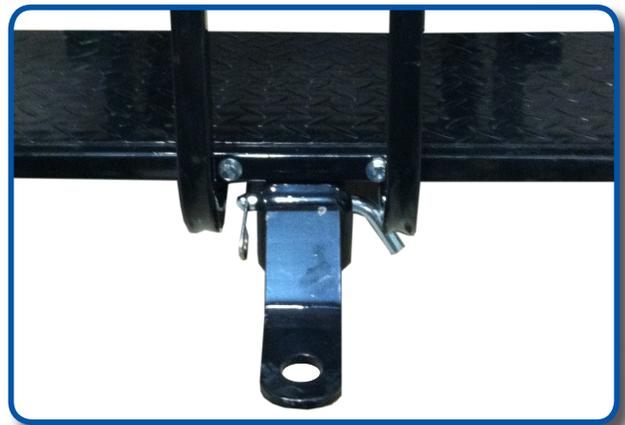

INSTALLATION COMPLETE

VISIT WWW.MYMADJAX.COM FOR MORE INSTALLATION VIDEOS.

Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. ("Ingersoll Rand"). Reference to Club Car®, Club Car® Precedent®, or Club Car® DS® or any of Ingersoll Rand's trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Ingersoll Rand or any of its subsidiary companies.