MODZ® FLIP 4

EZGO TXT AND TXT48
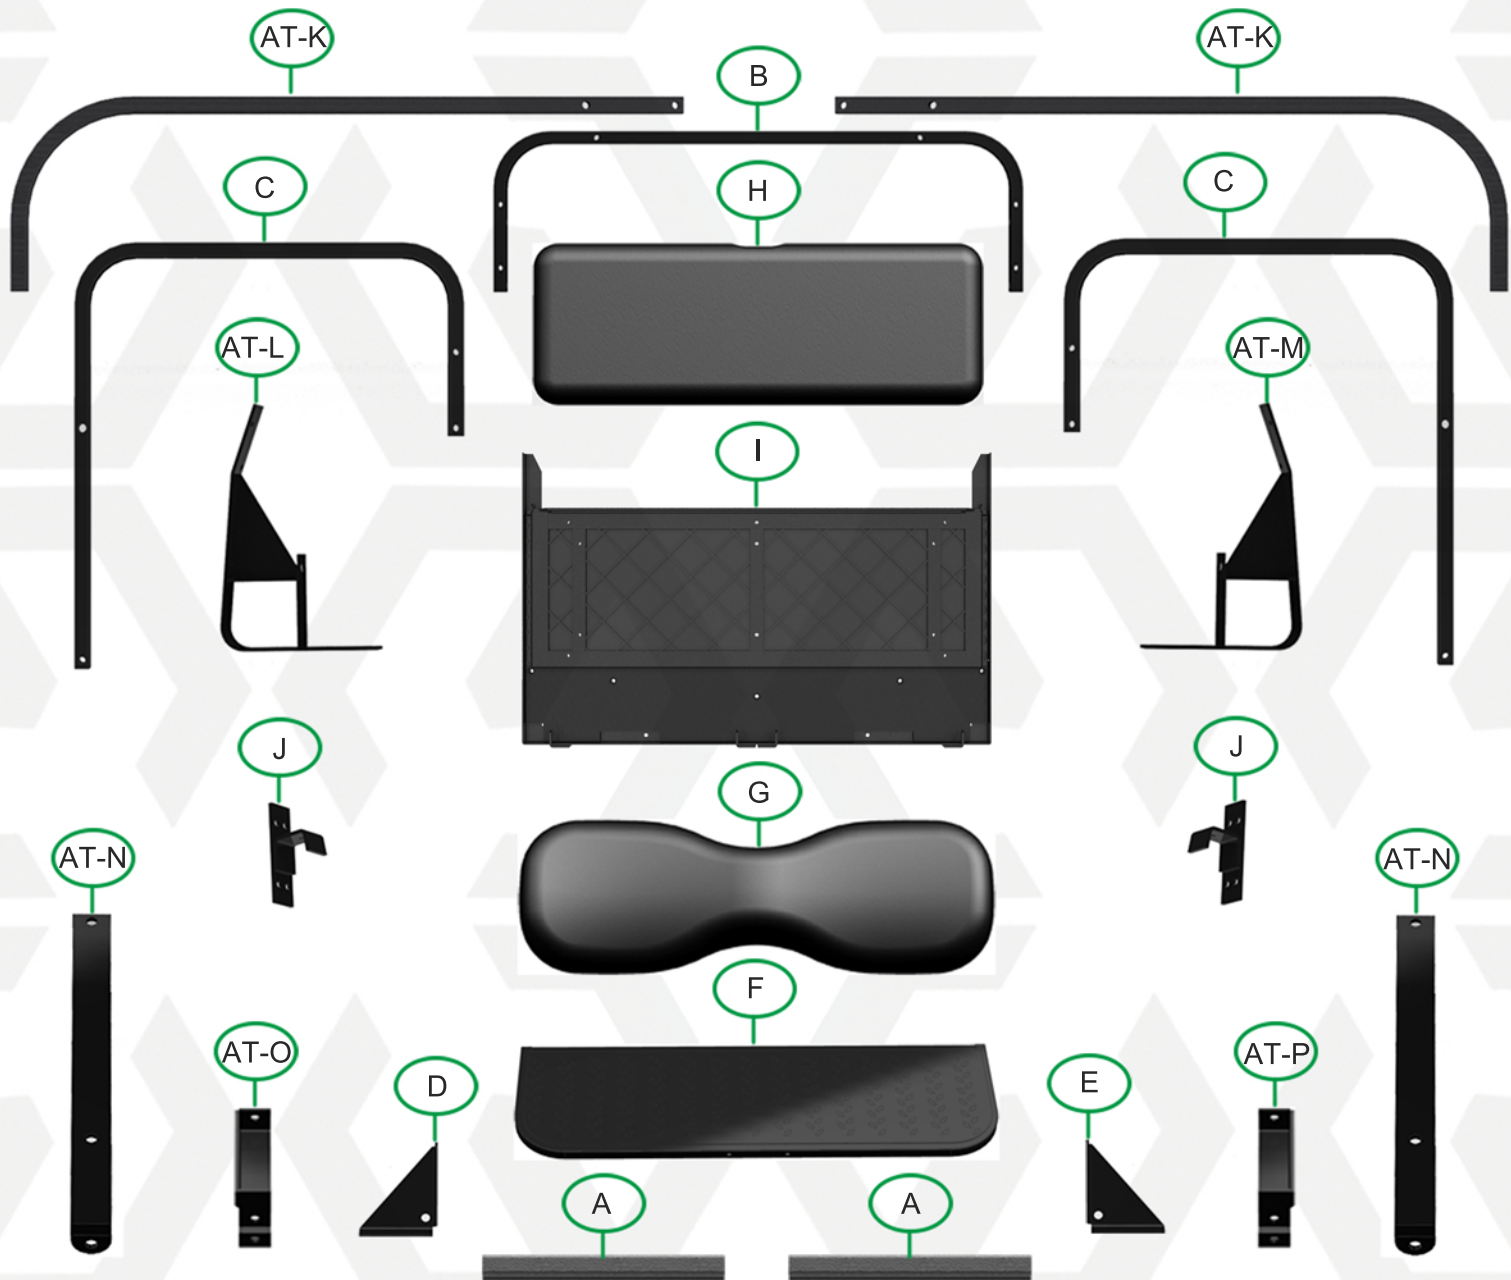
? → ▶ CartModz.com/Flip4   📱 844-MODZ-USA

Parts labeled: AT-K, B, AT-K, C, H, C, AT-L, AT-M, I, J, G, J, AT-N, F, AT-N, AT-O, D, E, AT-P, A, A

HARDWARE:

Shown to scale
Unit: mm

(4)H103
14mm
25mm
9.5mm
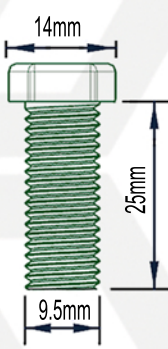
(6)H104
16mm
25mm
10mm

(2)H105
45mm
10mm

(4)H106
50mm
10mm

(12)H107
70mm
10mm

(4)H108
40mm
6mm
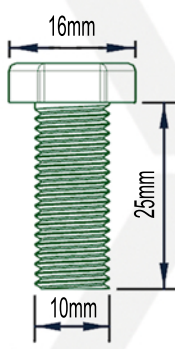
(6)H111
40mm
8mm
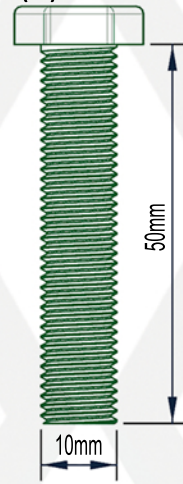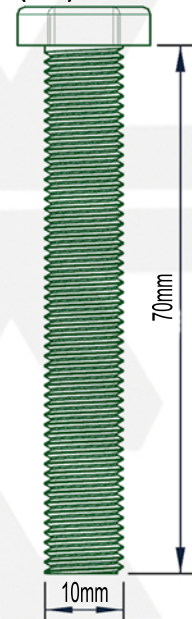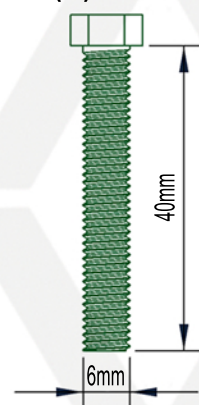
(24)H101
⌀10mm
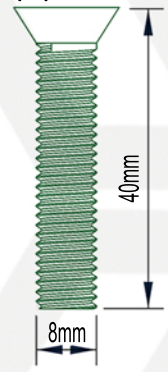
(52)H102
⌀10mm
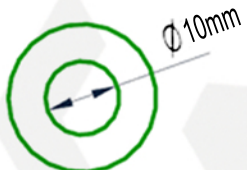
(4)H109
⌀6mm

(4)H110
⌀6mm

(2)H112
⌀11mm
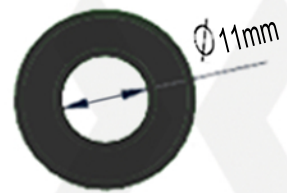
(6)H113
⌀9mm
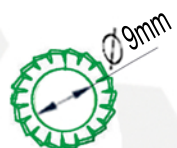
STEP 1

Remove top(Retain factory hardware).

STEP 2

Remove rear struts and front seat back cushion while supporting top (Retain factory hardware).

STEP 3

Remove both seat back supports

Rear Strut

The other side is the same

Rear Strut

The other side is the same

STEP 4

Install seat back supports.

Tighten hardware fully.

STEP 5

Some years may require center hole to be

drilled out of bag well.

drill hole →

← drill hole

Use a 3/8" drill bit to open up the (2) rear most holes in the bagwell area. Drill completely through the rivet and the frame.
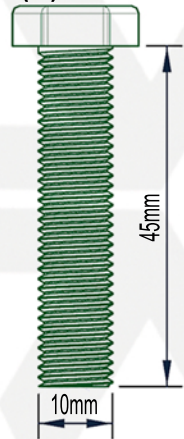
Install vertical

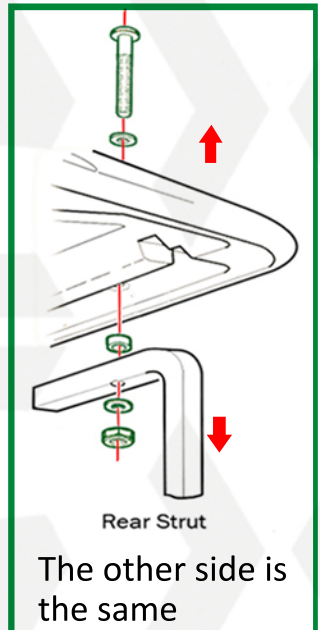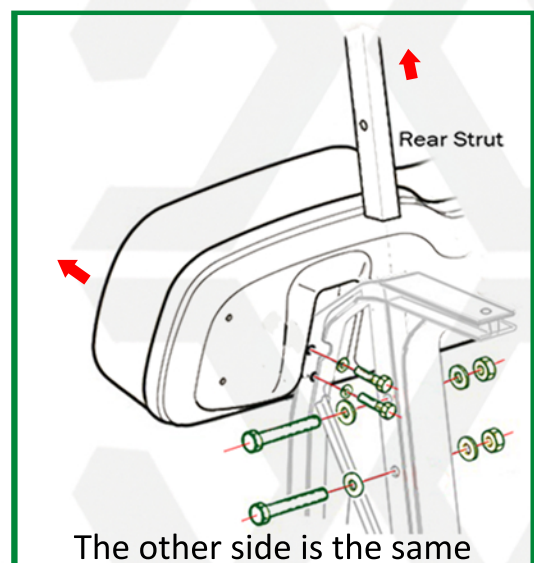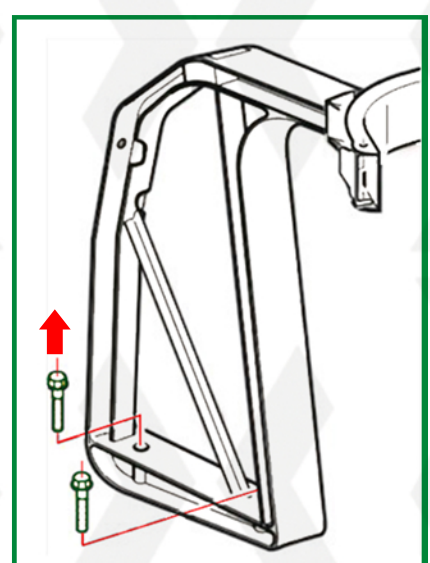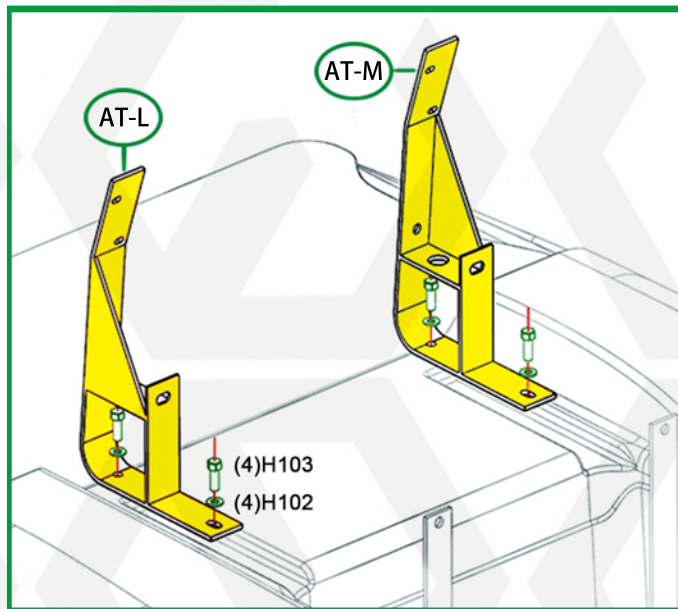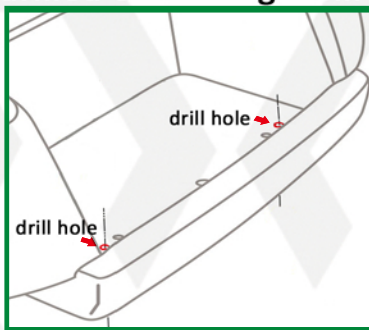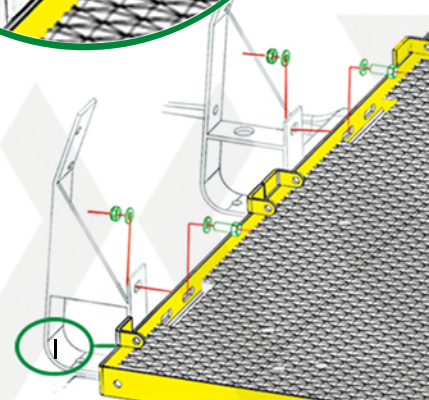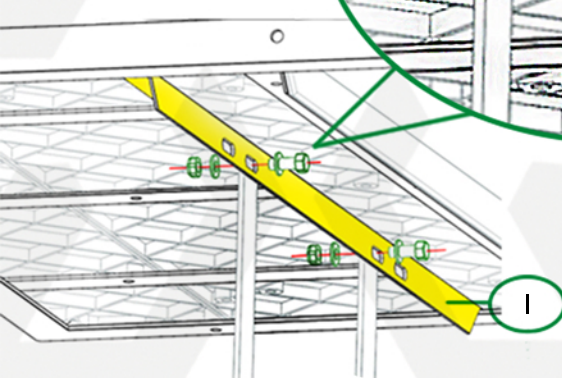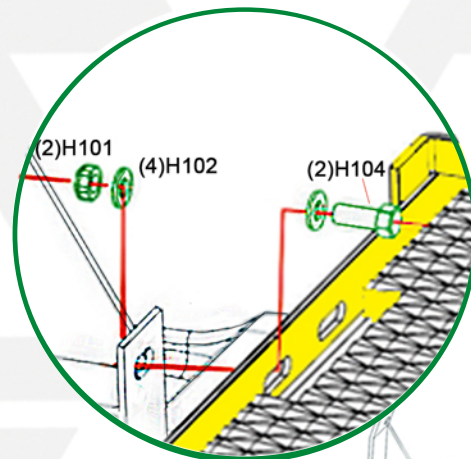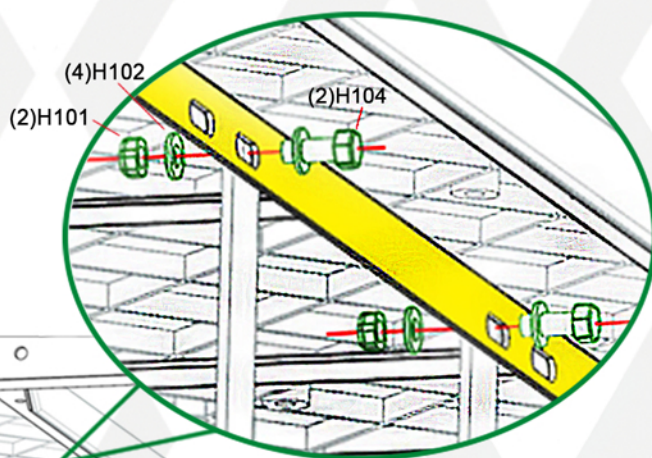support brackets.

Hand tighten

only.

AT-L

AT-M

(4)H103
(4)H102

(2)H106

(4)H102

(2)H101

AT-N   AT-N
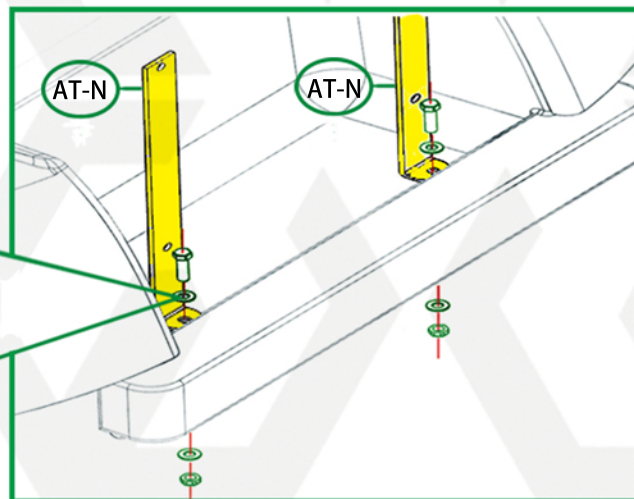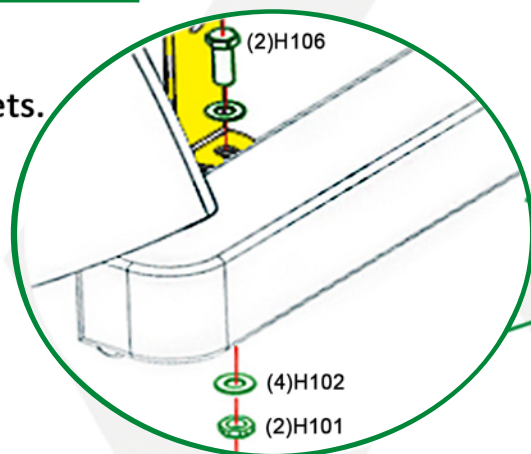
STEP 6

Install seat frame with plastic board.

Hand tighten only.

(4)H102

(2)H101

(2)H104

(2)H101   (4)H102   (2)H104

I

I

The installation method on the other side is the same.

(2)H101

(2)H105   (4)H102

STEP 7

Install support bracket.

Hand tighten only.

The installation method on the other side is the same.

(8)H102
(4)H107
(2)H112
(4)H101

B

C

C
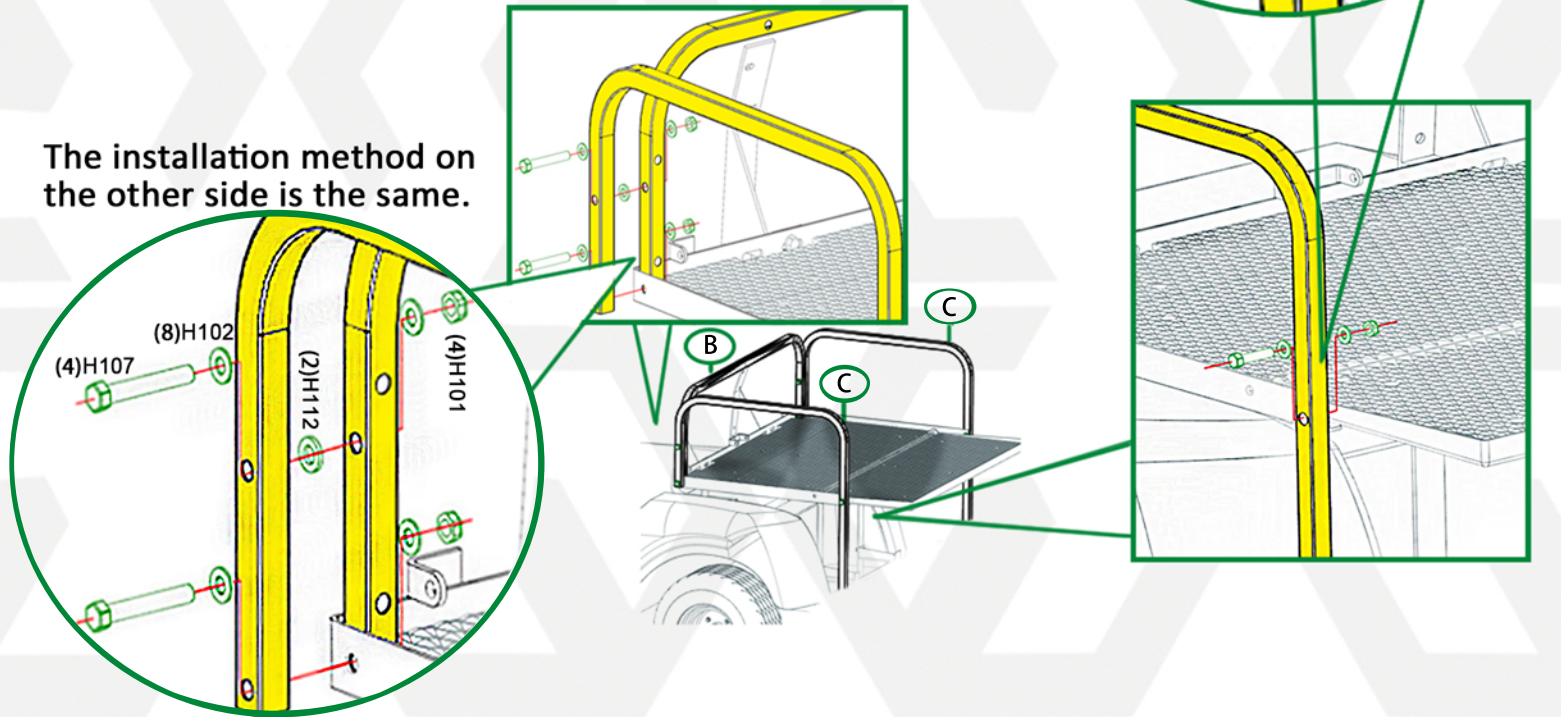
STEP 8

Install footrest support brackets.

Hand tighten only.

(2)H101

(4)H102   (2)H104

AT-P
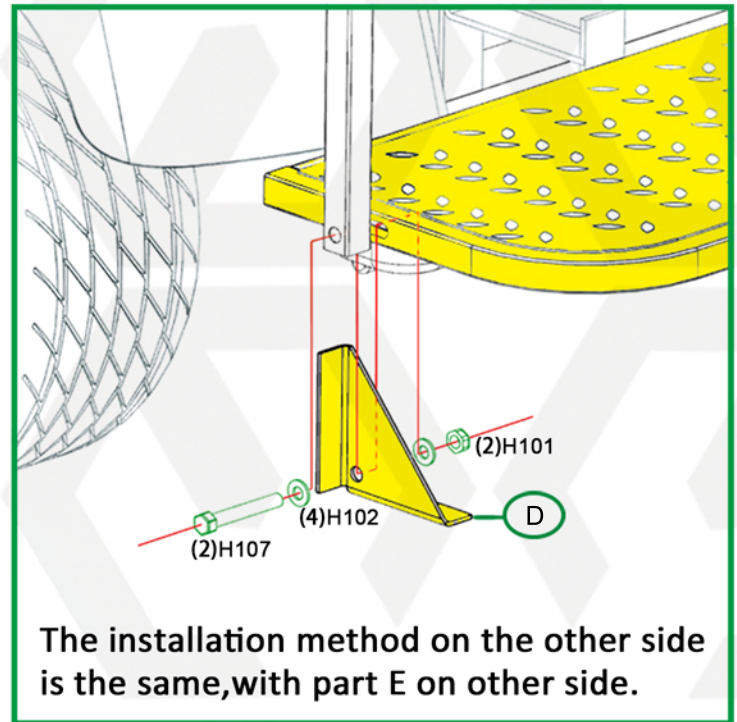
AT-O
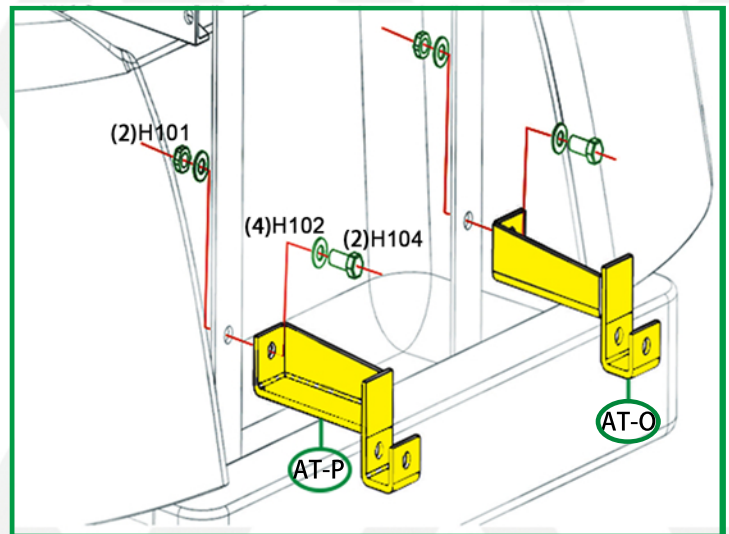
STEP 9

Install footrest brackets and footrest.

Hand tighten only.

F

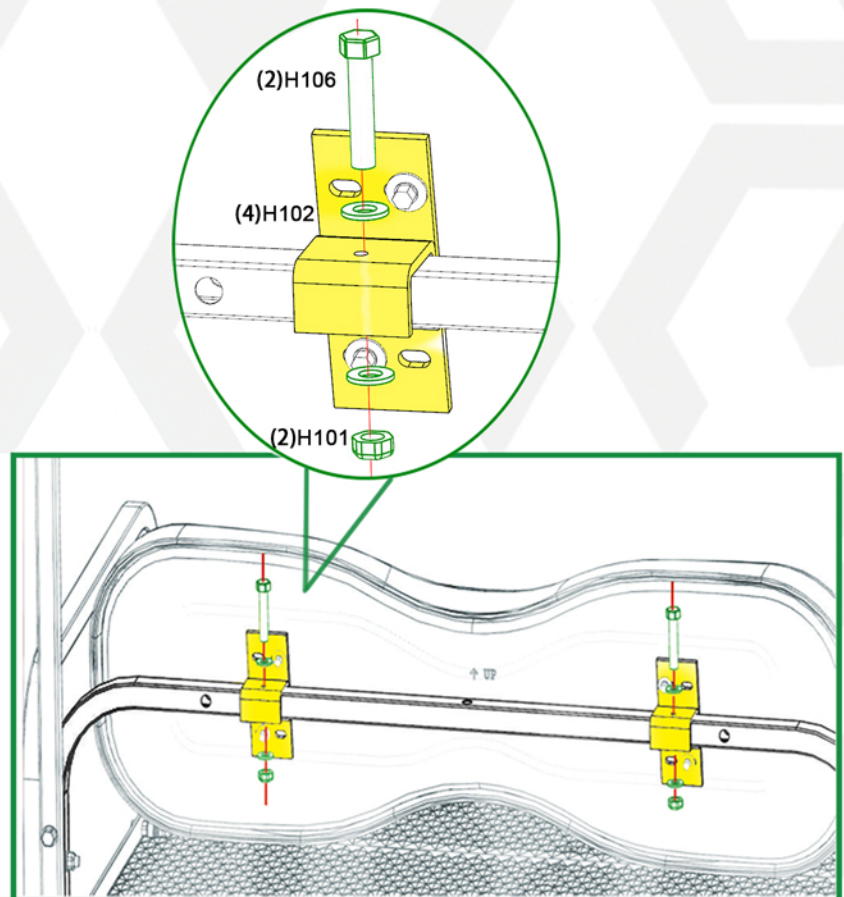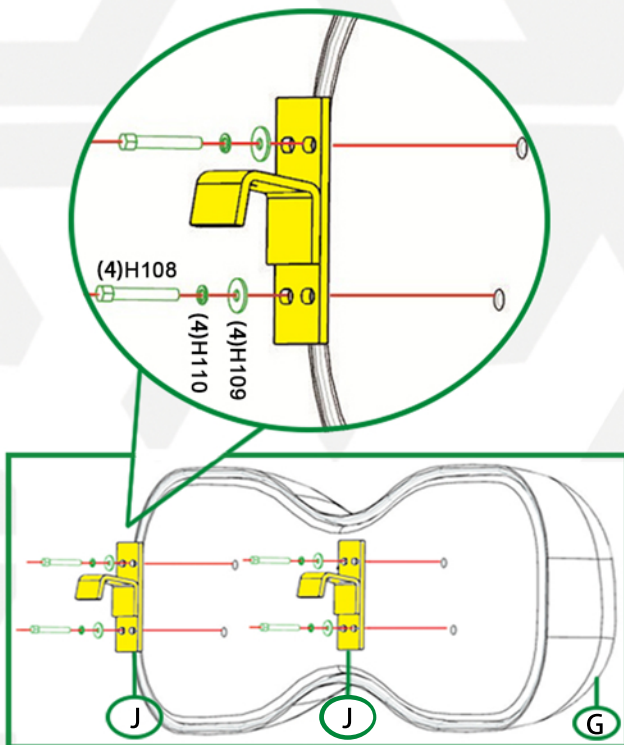(4)H102
(2)H107   (2)H101

(2)H101
(4)H102   D
(2)H107
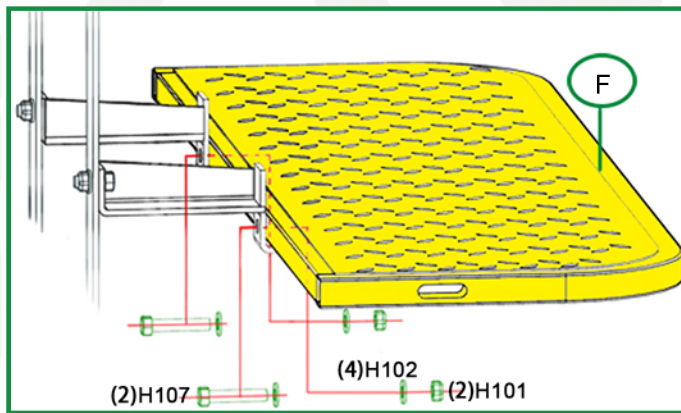
The installation method on the other side is the same, with part E on other side.

STEP 10

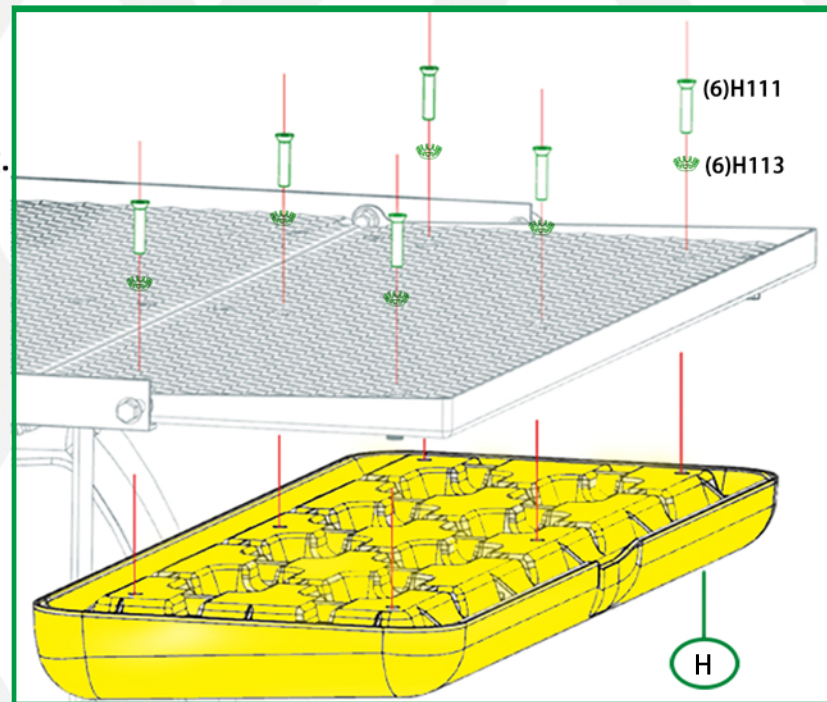Reinstall the front seat back according to the disassembly method with orginal hardware.

STEP 11

Install seat back.

(4)H108
(4)H110   (4)H109

(2)H106
(4)H102
(2)H101
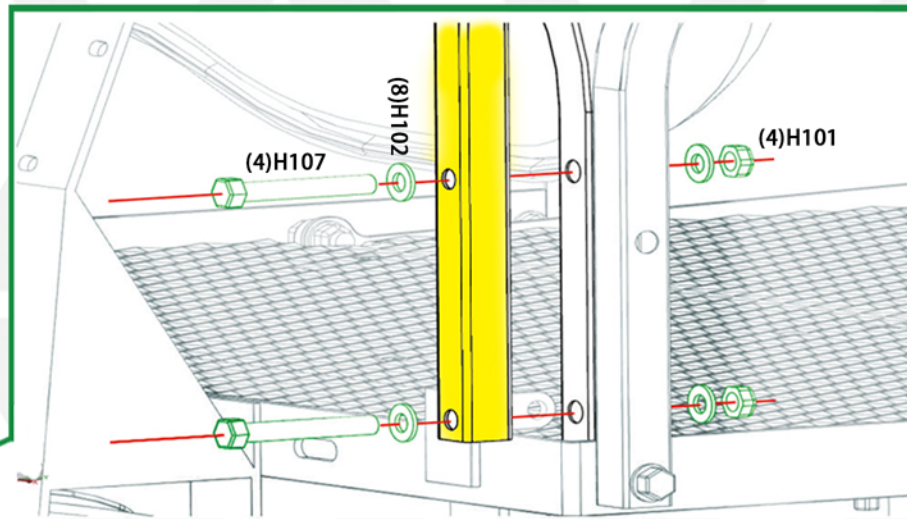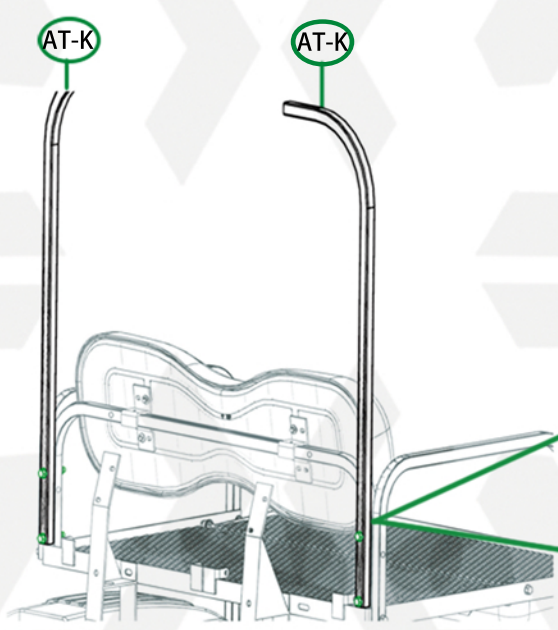
J   J   G

STEP 12

Install seat cushion.

Caution: Use hand screw driver and

Install screws loosely prior to tightening.

(6)H111
(6)H113
H

STEP 13

Install rear strut.

Hand tighten only.

AT-K   AT-K

(4)H107   (8)H102   (4)H101

The installation method on the other side is the same.

STEP 14

Reinstall the top using Original Hardware according to the disassembly method.

STEP 15

Install optional padded armrest covers (part A).

STEP 16

Tighten all hardware and enjoy!